

Parallel Blocks

Parallel Bar(Granite)

Instruction Manual

To ensure correct use, please read this instruction manual carefully before use. After reading, keep it in a safe place where the user can always refer to it.



OBISHI KEIKI SEISAKUSHO Co., Ltd.

Safety Precautions

- ※Before use, please read this instruction manual carefully and use the product correctly.
- ※The precautions shown here are intended to ensure the safe and proper use of the product and to prevent any potential hazards to the user.
- ※The precautions are categorized into three levels — **Danger, Warning, and Caution** — to clearly indicate the severity and urgency of potential harm or damage that may occur if the product is mishandled.


For Safe and Proper Use		
This instruction manual includes various symbols and pictograms throughout the text to ensure correct use of the product and to prevent harm or damage to the user. The symbols and their meanings are as follows. ● Please read the text after fully understanding the symbols and their meanings. ● After reading, be sure to keep this manual in a place where anyone using the product can easily refer to it at any time. ● All of these are safety-related instructions, so please be sure to follow them.		
	Danger	This indicates situations where incorrect handling could result in imminent risk of death or serious injury.
	Warning	This indicates situations where incorrect handling could potentially result in death or serious injury.
	Caution	This indicates situations where incorrect handling may result in injury to persons or only property damage.
Examples of symbols		The △ symbol indicates the presence of danger, warning, or caution messages, with specific precautions described within the figure. (The left figure is used to indicate general danger, warning, or caution without specifying details.)
		The ○ symbol indicates prohibited actions, with specific precautions described within or below the figure. (The figure on the left is used for general prohibition notices without specifying particular actions.)
		The ● symbol indicates mandatory actions, with specific instructions detailed within the figure. (The figure on the left is used for general mandatory actions or instructions without specifying details.)

Parallel Bar(Granite) Instruction Manual

1. Product Features

- They are provided as a set of two, with high parallelism of the four faces ensured.
- The mutual difference is controlled for each set.
- It has minimal aging and thermal variation, and does not rust.
- It is ideal for use as an inspection parallel block.

2. External View

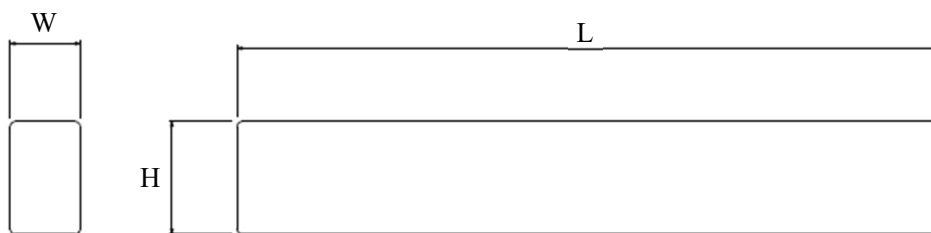

3. Specifications

Code No.	Nominal	Size (L×H×W mm)	Parallelism (μ m)	Mass (kg/Set)
LC101	150	150×30×20	1.5	0.7
LC102	200	200×40×25	2.0	1.2
LC103	250	250×40×25	2.0	1.4
LC104	300	300×50×30	2.0	3.0
LC105	400	400×75×40	2.5	8.3
LC106	450	450×80×45	3.0	11.0

4. Precautions for Use

- ① Clean the Precision Surface and the measurement surface of the workpiece before use.
- ② Handle the instrument carefully during use and storage to avoid impact or shock.
- ③ Allow the instrument to acclimate to the ambient temperature before use.
- ④ Do not use or store the instrument in places with drastic temperature changes.
- ⑤ After use, always wipe the instrument clean and store it in its storage case.
- ⑥ Check the instrument for abnormalities before use in the following cases:
 - When the instrument has been dropped.
 - When an object has been dropped onto the instrument.
- ⑦ Check the accuracy regularly before using the product.
- △ ⑧ If the product has sharp edges, handle it carefully to avoid injuring your fingers or other parts of your body.
- △ ⑨ Wear protective gloves and safety glasses as necessary to prevent injury while working.
- △ ⑩ Do not use this product if it is damaged or deteriorated, as it may cause injury or accidents.
- △ ⑪ If an injury occurs, give first aid immediately and seek medical attention if necessary.

Contact Information

JIS Certified Factory



OBISHI KEIKI SEISAKUSHO Co., Ltd.

Head Office: 1-1216-1 Nanyo, Nagaoka City, Niigata 940-1164

TEL: (0258)22-1100 FAX: (0258)22-0014

Tokyo Office: 3-5, Kanda Surugadai, Chiyoda-ku, Tokyo 101-0062

TEL: (03)3293-8881 FAX: (03)3293-8884

Nagoya Office: 2F Nichiju Bldg., 3-15 Oimachi, Naka-ku, Nagoya City, Aichi 460-0015

TEL: (052)322-4031 FAX: (052)322-5647



ISO9001 Certified (JQA-QMA11294)

Head Office and Factory

ISO9001
JQA-QMA11294

Design, development, manufacturing, and calibration services for precision measuring instruments (levels, surface plates, straight edges, reference measuring instruments, square rulers, blocks, dial gauge stands, comparators, angle measuring instruments, bench centers, squareness measuring instruments).